Bethesda Bed Stops

FEATURES

- High impact material
- Recycled wood core
- Custom sizes available
- Economical

COLOUR RANGE

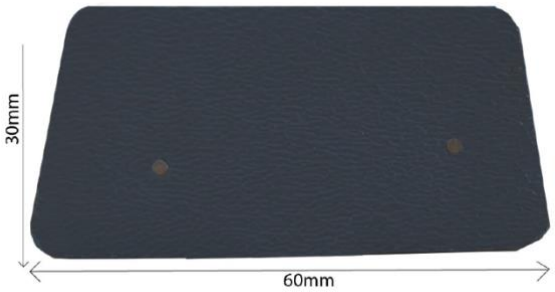

TYPE: Bed Stops

RANGE: Surface Protection

DESIGN: Bethesda

MATERIAL: Wood and Vinyl Sheets

DIMENSIONS:

length: up to 1200mm
height: 30mm
width: 60mm

FIRE TEST

N/A

ABRASION

N/A

IMPACT RESISTANCE

High

ENVIRONMENTAL

Made of recycled wood core

WARRANTY

12 months installation

MAINTENANCE

Cleaning instructions on page 4.

54 Catalano Circuit, WA
31 Pile Road, Somersby, NSW
WA: 08 9455 2228
NSW: 02 8322 0817
www.novaproducts.com.au
enquiries@novaproducts.com.au
Other locations: QLD (07) 35409848 | VIC (03) 99582881

Installation Instructions

DESCRIPTION OF WORK: **Installation of Bed Stops.**

TOOLS: Hammer/SDS drill (for concrete), battery drill, vacuum cleaner, hammer, pliers, caulking gun, hand roller, knife, drop saw with aluminium blade. All power tools to have a current 'tag'.

SAFETY STATEMENT: All tasks are viewed from an attitude of "Safety First". All tasks must be checked for the public and workers safety.

PPE CHECKLIST: Barricading, safety glasses, steel toe boots, high visibility clothing, hearing protection, gloves, hard hat, and knee pads, first aid kit.

Note: The term 'client' refers to the actual client or the client's site agent, project manager or foreman.

1. Locate and approve layout of stair nosing as required by client.
2. Advise client if you consider the layout to be incorrect.
3. Advise client of any safety issues for each location you are working on. Supply a completed JSA to client and all workers.
4. Locate power points.
5. Run all Power cables in safe manner do not make trip hazards.
   Use cable stands if required.
6. Ensure to connect all cables into an RCD box.
7. Request client to provide safe work space for onsite cutting and production.
   Measure each stair / step and cut CCRG to suit
8. Predrill and counter sink each piece of stair nose. 50mm from each end and then 250-300mm centres.
9. Note: items 7 & 8 - These can be completed and supplied off site by Novaproducts.
10. Place Drilled CCRG on step and mark each hole and drill holes. Alternatively drill through the pre-drilled aluminium. Generally 6mm plugs and 8g screws are used. Drill holes 6x30mm.
11. Apply suitable adhesive beneath the aluminium (this reduces noise underfoot and helps the permanent bond). An example is solvent based Liquid Nails (not supplied).
12. Vacuum dust and dirt at this point and remove any excess glue.
13. If ramp edge is not required remove with pliers.
14. Fit plugs (if concrete) and install screws making sure the screw head does not sit above the aluminium.

DESCRIPTION OF WORK: **Installation of exterior insert**

1. Cut vinyl packer 10mm bigger than each step requires. Allow to acclimatise for 24 hours if possible. Note the packer may be supplied in different colours as this component is not seen.
2. Abrade the aluminium: It is a good idea to clean dust from the grooves at this point.
3. Clean both aluminium and vinyl parts with acetone (not supplied).
4. Apply double sided tape (supplied) to the aluminium retainer. Apply pressure to ensure full contact.
5. Fit the rough side of the vinyl to the aluminium retainer and roll firmly to give secure contact. This should fit neatly in the void with no more than 1mm gap.
6. Clean the top side of the vinyl with and acetone allow to dry. Apply the self-adhesive Nova-tape (of selected colour) neatly to the smooth side of the vinyl packer. This should cover the packer completely. Note, for best results do not apply in direct sun or in wet conditions.
7. Use a hand roller on the packer and the anti-slip tape to ensure a secure bond. The adhesives are 'pressure sensitive' so the more pressure the better the bond.
8. Trim off excess vinyl and inserts carefully with a sharp knife and straight edge. It is recommended to leave 1mm overhang to allow for possible shrinkage over time.

ENSURE SITE IS CLEAN & SAFE BEFORE LEAVING.

Cleaning Instructions

Clean with neutral detergents and ensure minimal detergent used, so as it does not leave any residue. For best results clean with emulsion free disinfectant (Contact Novaproducts for more information).

54 Catalano Circuit, WA
31 Pile Road, Somersby, NSW
WA: 08 9455 2228
NSW: 02 8322 0817
www.novaproducts.com.au
enquiries@novaproducts.com.au
Other locations: QLD (07) 35409848 | **VIC** (03) 99582881